



Australian Energy
Research Laboratories Pty Ltd

USER'S MANUAL

RACEMAX MAXIMIZER
Australian Energy Research Labs

AER02.004 – ver 4
1 July 2010

AERL RACEMAX MAXIMIZER

User's Manual



Australian Energy
Research Laboratories Pty Ltd

USER'S MANUAL

RACEMAX MAXIMIZER
Australian Energy Research Labs
AER02.004 – ver 4
1 July 2010

TABLE OF CONTENTS

1	Overview.....	3
2	Maximizer Layout.....	3
3	Safety Precautions.....	4
4	Circuit Breakers.....	6
5	Installation.....	7
5.1	Mounting.....	7
5.2	Connections.....	7
6	Operating Guidelines.....	8
6.1	Powering Up the Maximizer.....	8
6.2	100% Battery Float Voltage Adjustment.....	8
6.3	Peak Power Tracking Setup.....	9
7	Troubleshooting.....	10
7.1	Low Battery Light Often Comes On.....	10
7.2	Unit Does Not Charge the Battery.....	10
7.3	Battery Bank Using Excessive Water (Electrolyte).....	10
7.4	Maximizer does not boost voltage.....	11
8	Warranty Information.....	12



Australian Energy
Research Laboratories Pty Ltd

USER'S MANUAL

RACEMAX MAXIMIZER Australian Energy Research Labs

AER02.004 – ver 4
1 July 2010

1 OVERVIEW

The AERL Race-Trim Mini-Maximizer is a high efficiency, boost only, common negative peak power point tracker.


It employs a tracking strategy which regulates the PV array voltage to a fixed percentage of its open circuit voltage. This tracking strategy has been proven to be highly robust, immune to local extrema, and results in power losses of less than 0.5% over the whole operating temperature range of a PV array.

The improved power of the new Mini-Maximizer over previous models makes it an ideal choice for solar car teams looking to get the most out of their PV array.

Additional features include:

- High 98 – 99% operating efficiency.
- Compatible with all types of solar cells and battery arrays.
- Passive cooling & no moving parts results in highly reliable operation to 50°C .
- Output voltage options of 72, 96, 120, 144, 168V.
- Compact and lightweight design, weighing only 750g.

2 MAXIMIZER LAYOUT

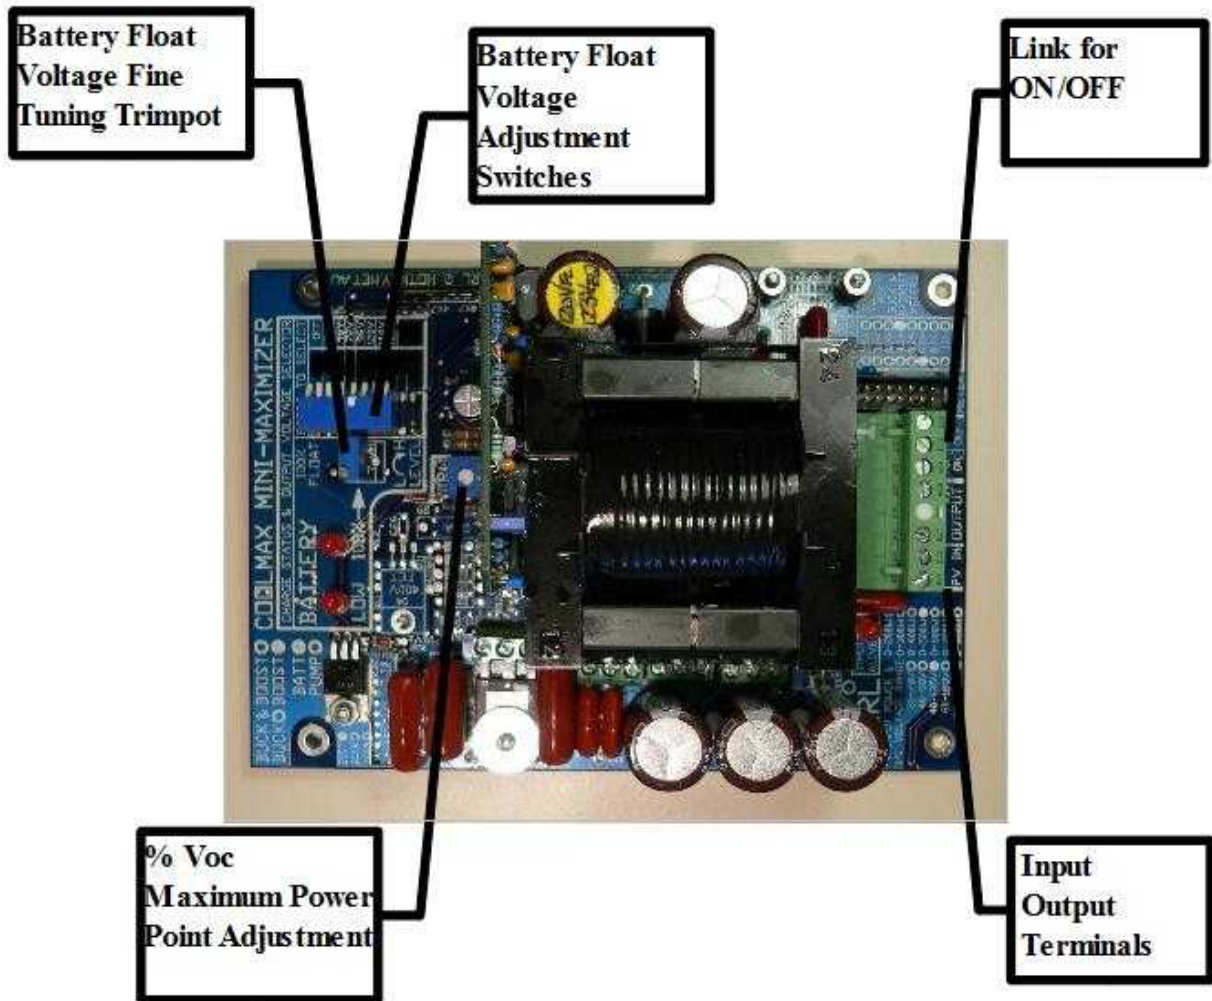



Australian Energy
Research Laboratories Pty Ltd

USER'S MANUAL

RACEMAX MAXIMIZER Australian Energy Research Labs

AER02.004 – ver 4
1 July 2010

3 SAFETY PRECAUTIONS

WARNING: THE DC VOLTAGE LEVELS AT WHICH THE MAXIMIZER OPERATES CAN BE POTENTIALLY LETHAL IF HANDLED WITHOUT ADEQUATE CAUTION.

NEVER TOUCH THE MAXIMIZER AT ANY TIME WHILE IT IS ON. SOME ADJUSTMENTS CAN ONLY BE MADE TO THE MAXIMIZER WHILE IT IS OPERATING – ENSURE THAT THESE ARE DONE WITH AN ELECTRICALLY ISOLATED TOOL AND THAT CAUTION IS USED AT ALL TIMES.

PLEASE NOTE THAT THE “LINK ON/OFF” CONTROL INPUT DOES NOT ISOLATE THE INPUTS OR OUTPUTS OF THE MAXIMIZER, IT SIMPLY GENERATES A RESET SIGNAL THAT DISABLES THE MAXIMIZER. CIRCUITRY ON THE MAXIMIZER BOARD WILL CONTINUE TO FLOAT AT BATTERY VOLTAGE AND/OR PV VOLTAGE EVEN WITH THE OFF SWITCH DEPRESSED.

DO NOT EXCEED THE CURRENT AND VOLTAGE RATINGS MARKED ON EVERY MAXIMIZER, AND LISTED IN THE DATASHEET. TO DO SO, IMMEDIATELY VOIDS THE WARRANTY.


- In particular the PV Input Open-Circuit Voltage and Current rating must not be exceeded.
- Always ensure that the Maximizer Off switch on the Piano switch is depressed before making or breaking any connections.
- Always measure the PV Open-Circuit Voltage and Polarity and Battery Polarity before closing the circuit-breakers and making the final connection to the MAXIMIZER.

Note on Maximizer Ratings: To avoid exceeding the maximum short circuit current listed in the datasheet, care should be taken that the total power rating of the PV Array does not exceed the battery voltage multiplied by the maximum short circuit current.

4 CIRCUIT BREAKERS

ALWAYS FIT DC RATED INPUT AND OUTPUT PROTECTION CIRCUIT BREAKERS WITH APPROPRIATE VOLTAGE AND CURRENT RATINGS.

0 - 120V OUTPUT

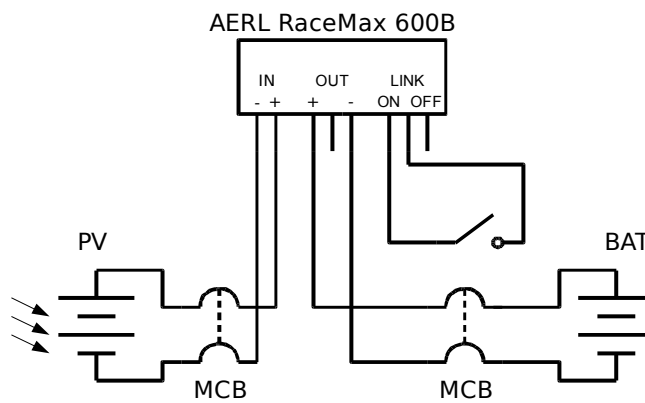

120 - 180V OUTPUT

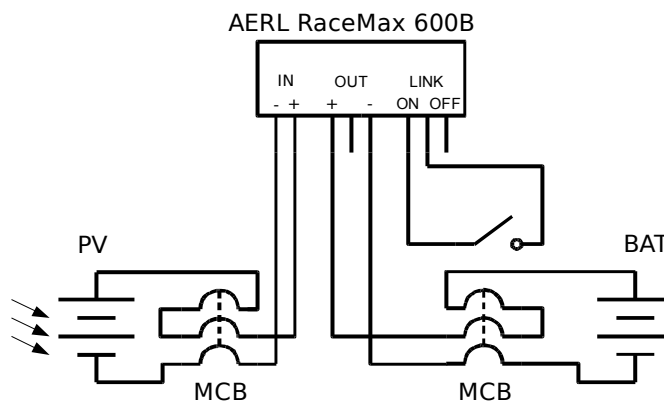


Figure 4.1: Maximizer circuit breaker configuration using 60V, 20A 60kA MCBs for different output voltages.



Australian Energy
Research Laboratories Pty Ltd

USER'S MANUAL

RACEMAX MAXIMIZER Australian Energy Research Labs

AER02.004 – ver 4
1 July 2010

5 INSTALLATION

5.1 MOUNTING

- If the Maximizer is to be mounted in an enclosure, ensure that the cabinet is large and adequately ventilated. Do not mount the unit anywhere that airflow is restricted.
- Never mount the unit in a sealed enclosure, it will overheat.
- Power transfer efficiency through the Maximizer will be better the cooler the unit is kept.
- Do not mount the unit where rain or direct sunlight can reach the unit, or where moisture condensation can affect the unit.

5.2 CONNECTIONS

- Ensure that the Maximizer is switched OFF by unlinking terminals 6 & 7 on the main connector.
- Use appropriately rated wire to connect PV input and battery bank output. Polarity is indicated on the board. Reversing polarity of input or output will cause damage to the Maximizer.
- Install circuit breakers as described in Section 4.
- Check the polarity of the input and output with a multimeter before switching on the Maximizer.
- Terminals 6 & 7 (“Link ON”) need to be linked to switch the Maximizer on. It can be useful to wire a switch in between terminals 6 & 7 to allow the Maximizer control to be disabled when necessary. Note that switching the Maximizer off by disconnecting terminals 6 & 7 does not make the Maximizer safe to touch.

6 OPERATING GUIDELINES

Ensure that the MAXIMIZER is switched OFF – terminals 6 & 7 are not linked on the main input connector, before making any electrical connections or closing any Input and Output Circuit-Breakers.

IMPORTANT: To avoid overloading the Maximizer, pay attention to the warnings given in Section 3. As mentioned in Section 3, it is important to avoid connecting the Maximizer to a PV Array if its power rating exceeds the battery bank voltage multiplied by the maximum short circuit current quoted on the Maximizer datasheet. To do so will overload the current handling capabilities of the product, most likely cause damage to the board and void the warranty.

6.1 POWERING UP THE MAXIMIZER

The Racemax Maximizer must have a link placed between terminals 6 & 7 on the main input connector, where it is marked 'Link for ON' for the control to be enabled.

It is *highly recommended* that the Maximizer be connected to the load at all times when it is enabled. Avoid switching the Maximizer on with the battery disconnected (i.e. battery circuit breaker open) or disconnecting the battery while the Maximizer is switched ON.

6.2 100% BATTERY FLOAT VOLTAGE ADJUSTMENT

When connected to a battery pack, the unit is designed to charge to a preset voltage point and then maintain constant voltage.

The 100% float set point can be adjusted using a combination of the piano dipswitches to set the appropriate range and the float adjustment trimpot for fine tuning.

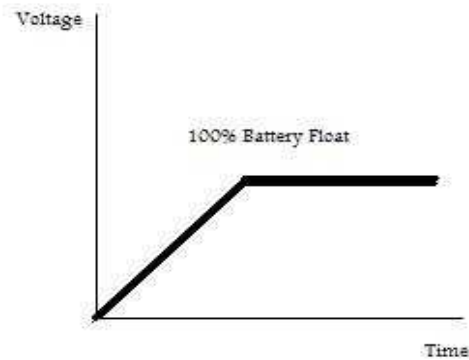


Figure 5.1: Charging profile of Mini-Maximizer

If the battery voltage is above the 100% float set point, the 100% full LED will be on. If the battery voltage is below the 100% float set point, the LED will switch off. This can be used as feedback to indicate the position of the 100% float set point, if the Maximizer is connected to a known voltage.

The 100% full LED will work as an indicator of the 100% float set point even if the Maximizer is disabled.

Adjustment Procedure

- Connect battery pack to output of Maximizer.
- When the battery pack is at the desired top of charge voltage, adjust the piano dipswitch voltage and the trimpot so that the 100% full LED only just turns on.

The following table shows roughly the range of values that can be set with the piano dipswitch and the trimpot

6.3 PEAK POWER TRACKING SETUP

During normal operation, the Maximizer tracks the peak power point of the PV array by periodically sampling the open-circuit voltage of the array. It then sets the array voltage to a percentage (usually between 70 – 85%) of the measured Voc.

Note: Due to the periodic sampling operation, the Maximizer is disabled to measure Voc for about 0.066% of its running time.

Adjusting the Voc Percentage (% Voc)

1. With the batteries and the array isolated, connect an ammeter in series between the battery bank and the Maximizer.
2. Locate VR2, the trimpot just above the header for the control board.
3. Switch the Maximizer on, close the battery and PV array circuit breakers and measure the current flowing into the batteries. (Note: The batteries will need to be discharged below the 100% battery float level, and the battery 100% light should *NOT* be on during this process).
4. Using a plastic screw driver, sweep the VR2 trimpot through the range to achieve the maximum current transfer into the batteries. This will set the voltage at the peak power point for the PV array. Always use caution when making adjustments to the Maximizer while it is connected to the PV array or the battery pack.

Note: To achieve best results from the AERL Maximizer, it is recommended that the Voc Percentage Set-Point be calibrated while the PV Array is experiencing its most typical operating temperature – more specifically the average of its expected operating temperature over time.

7 TROUBLESHOOTING

7.1 LOW BATTERY LIGHT OFTEN COMES ON

This could indicate that the PV system is underpowered, never reaching a full 108% equalise value. The battery life will be severely compromised in this situation. The more often the LED comes on, the more power should be added to the PV array.

Solution: Add more PV modules to the array to increase the power output.

If the array is sufficiently powerful, but the LED is still very often on, check that the Maximizer is set up for the correct voltage of the battery pack. See section 5.5 for adjusting the battery float voltage. Also check that the Maximizer is charging the battery by checking the output current on the LCD meter, and if the Maximizer is not functioning continue to 10.2.

7.2 UNIT DOES NOT CHARGE THE BATTERY

If Temperature Compensation is not being used (default setup) ensure that the switch marked Temp. Comp. OFF (switch number 9) is *pressed down*. Not doing so may cause the unit to behave strangely.

If this is not the cause of the problem, check the following:

- All connections to the Maximizer are secure and screw terminals are done up tight.
- Check that the Maximizer is enabled using a link between terminals 6 & 7 (Link ON)
- Check the integrity of the blue circular MOVs. These are surge protectors and will fail destructively in the event of circuit overload. This could indicate a fault with the unit and it should be returned for repair.
- Check the integrity of the large crowbar diodes located below the main inductor winding. These fail destructively if a reverse polarity is applied.
- Check with a multimeter that the input voltage is sufficient to power the Maximizer. If the input voltage is below the minimum input voltage of the Maximizer the unit will not power up.
- **Note: The minimum input voltage of the Maximizer changes depending on the nominal voltage of the battery pack in use. The rule of thumb is $V_{oc} > 1.65 \times V_{nom}$. Check the datasheet for a graph to show the minimum input voltage depending on battery pack voltage.**
- Email techsupport@aerl.com.au with the details of your set up, problem description and Maximizer model.



Australian Energy
Research Laboratories Pty Ltd

USER'S MANUAL

RACEMAX MAXIMIZER Australian Energy Research Labs

AER02.004 – ver 4
1 July 2010

7.3 BATTERY BANK USING EXCESSIVE WATER (ELECTROLYTE)

The battery bank is lightly loaded compared to the input PV power and rarely comes off FLOAT voltage.

Solution: Press the 5th Piano Dipswitch marked “Sealed Batts” to drop the FLOAT voltage by 2.5%.

7.4 MAXIMIZER DOES NOT BOOST VOLTAGE.

Solution: Check that the Maximizer is enabled using a link between terminals 6 & 7 (Link ON)



Australian Energy
Research Laboratories Pty Ltd

USER'S MANUAL

RACEMAX MAXIMIZER Australian Energy Research Labs

AER02.004 – ver 4
1 July 2010

8 WARRANTY INFORMATION

1. AERL warrants that the Product will be free from manufacturing defects for a period of 24 months from the date of dispatch of the products by AERL to the customer.
2. The Products technical specifications are contained within the Product Datasheet. The Product will conform to the technical specifications contained in the Product Datasheet at the time of dispatch of the Products to the Customer. If the technical specifications as contained in the Product Datasheet are not met, AERL will repair, replace the Product, or refund the amount paid by the Customer in relation to the Product at the Customers option. AERL is under no obligation to provide assistance or advice to the Customer in relation to the technical specifications.
3. The Products must be installed in strict accordance with the Installation Recommendations listed in this Manual.
4. In no event will AERL be liable for:
 - (a) any loss or damage which the Customer suffers arising from, or caused or contributed to by, the Customer's negligence or the negligence of the Customer's agents or servants; and
 - (b) special, indirect or consequential loss or damage as a result of a breach by the Customer of these Standard Terms including, without limitation, loss of profits or revenue, personal injury, death, property damage and the costs of any substitute Products which the Customer obtains.
5. The Product is not covered for damage occurring due to water, including but not limited to condensation, moisture damage and other forms of precipitation.
6. The Product is not covered for damage occurring due to the Product being incorrectly installed or installed in a manner not in accordance with the Installation Recommendations listed in the Product Manual.
7. The Product is not covered for damage occurring due to failure on the part of the customer to operate the product in accordance with the technical specifications as listed in the Product Datasheet.
8. The Product is not covered for damage occurring due to lightning.
9. The Product is not covered for situations where it is used in a manner not specifically outlined in the Product Manual.
10. If any provision in this document is invalid or unenforceable this document will remain otherwise in full force apart from such provision, which will be deemed deleted.